



**GF33PT-E**  
**GF33PT-U**

For use with gas tool manual FT71696-46.

STANLEY

**BOSTITCH®**

[www.bostitch.eu](http://www.bostitch.eu)

# BOSTITCH

GF33PT

Parts List: IP1306-2REVA-EU

**To be Used with tool parts illustration: FT71695-48  
and operation and maintenance manual: FT71695-46**

**Serial Number on the Tool: Serial No. Q300001 and Higher**

ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	9R192101	HX. SKT HD. BT (W/FLG) M5X12	61	9R192157	PUSHING LEVER ARM (D)
2	9R192102	TOP COVER	62	9R192158	HX. SKT HD. BT M5X10
3	9R192103	FILTER	63	9R192159	PUSHING STOPPER
4	9R192104	MOTOR	64	FT71695-23	PRODUCT LABEL
5	9R192105	RUBBER WASHER	65	9R192163	SCW M5
6	9R192106	ROLL PIN D2.5X25	66	9R192164	HOUSING (A)
7	9R192107	MOTOR MOUNT	67	9R192161	ADJUSTER BUSH (A)
8	9R192108	MOUNT SLEEVE	68	9R192160	PUSHING LEVER(A)
9	9R192109	SHAFT WASHER	69	9R192166	PROTECTOR(A)
10	9R192110	SPARK PLUG (A)	70	9R192168	NYLON NUT M4
11	9R192111	MOTOR SPRING	71	9R192169	HX. SKT HD. BT M5X15
12	9R192112	HX. SKT HD. BT M5X20	72	9R192170	SLEEVE
13	9R192113	CYLINDER HEAD ASS'Y	73	9R192171	SLF T/S (W/FLG) D4X20 (BLK)
14	9R192114	O-RING (I.D 59.92)	74	9R192175	SLF T/S (W/FLG) D4X45
15	9R192115	NUT M4	75	9R192176	SWITCH MOUNT
16	9R192116	WASHER M4	76	9R192177	SWITCH ARM
17	9R192117	FAN	77	FT71695-22	LABEL, WARNING
18	9R192118	HX. SKT HD. BT M4X16	78	9R192351	HANDLE(D)
19	9R192119	CHAMBER HEAD	79	FT71695-11	MAG. BATTERY LABEL
20	9R192120	GASKET (B)	80	9R192178	PRISM (A)
21	9R192121	CHAMBER	81	9R192186	CHAMBER LK BAR
22	9R192122	PLUNGER O-RING	82	9R192185	TRIGGER SPRING (A)
23	9R192123	SHAFT RING	83	9R192187	PIN D2.5
24	9R192124	BT WASHER M5	84	9R192188	TRIGGER INTERNAL WIRE (A) SET
25	9R192125	SHAFT	85	9R192220	WIRING PLATE (B)
26	9R192126	MACHINE SCW M4X6	86	9R192219	SLF T/S D3
27	9R192217	WIRING PLATE	87	9R192218	HOOK (B)
28	9R192127	ADAPTER	88	9R192189	NYLON NUT M5
29	9R192128	HX. SKT SET SCW M4X5	89	9R192336	NAIL RAIL
30	9R192222	SHAFT COVER	90	9R192338	MAGAZINE PLATE
31	9R192223	WASHER	91	9R192184	SLF T/S (W/FLG) D4X14 (BLK)
32	9R192129	CHAMBER LK PLATE	92	9R192182-EU	CONTROLLER
33	9R192130	PIN (A)	93	9R192180	WIRING COVER
34	9R192131	SWITCH PLATE	94	9R192179	LK BAR SPRING
35	9R192132	O-RING (I.D. 66.27)	95	9R192181	FLAT HD. SLF T/S D4
36	9R192133	RETAINING RING	96	9R192193	LATCH
37	9R192134	PISTON RING	97	9R192194	ROLL PIN D2X8
38	9R192349	PISTON	98	9R192195	SPRING D3.6
39	9R192136	PISTON BUMPER	99	9R192196	CELL COVER
40	9R192137	CHAMBER STOP RUBBER	100	9R192214	SLF T/S (W/FLG) D5X20 (BLK)
41	9R192138	CYLINDER ASS'Y	101	9B12072R-EU	BATTERY EB 714S (EU)
42	9R192139	SEAL LK HX. SKT HD. BT M4X10	102	9R192197	CELL RUBBER (A)
43	9R192140	BUFFER COVER (A)	103	9R192202	SPRING
44	9R192141	REED VALVE	104	9R192203	SWITCH LEVER (B) ASS'Y
45	9R192221	SEAL LK SCW M4X6 (BLK)	105	9R192200	NAIL FEEDER (A)
46	9R192142	MUFFLER	106	9R192201	TENSION PLATE (C)
47	9R192229	BLADE GUIDE	107	9R192205	LEVER STOPPER
48	9R192144	PLATE SLEEVE	108	9R192192	CELL LEVER (A)
49	9R192335	SIDE PLATE	109	9R192206	ROLL PIN D4X28
50	9R192146	SPECIAL NUT M5	110	9R192224	SLEEVE
51	9R192147	NYLK HX.SKT HD.BT M5X50	111	9R192207	SPRING
52	9R192148	NOSE SLEEVE	112	9R192339	NAIL FEEDER (B)
53	9R192150	BELLEVILLE SPRING M4	113	9R192209	RIBBON SPRING
54	9R192154	CYLINDER PLATE	114	9R192340	PUSHING LEVER STOPPER
55	9R192155	SEAL LK HX. SKT HD. BT M5X10	115	9R192210	SPRING D8
56	9R192152	PUSHING LEVER SPRING (A)	116	9R192216	MAGAZINE GUARD
57	9R192156	U-NUT M4	117	9R192215	HX. SKT HD. BT M4X18
58	9R192139	SEAL LK HX. SKT HD. BT M4X10	118	9R192350	HANDLE(C)
59	9R192151	PUSHING LEVER ARM (C)	119	9R192398	FEEDER KNOB
60	9R192153	PUSHING LEVER CONNECTOR			

**STANDARD ACCESSORIES**

501a	9B127073R-E	EU CHARGER
501b	9B127073R-U	UK CHARGER
503	9R192225	CASE (EU)
504	166038	HEX. BAR WRENCH 4MM
505	SB-20CL	LUBRICANT, OIL
506	FT71695-46	CORDLESS GAS NAILER MANUAL
507	FT71695-48	MANUAL ILLUSTRATIONS